


### 3-5. Using the interior lights

## Interior lights list

**Illuminated entry system:** The various lights automatically turn on/off according to the presence of the electronic key, whether the doors are locked/unlocked, whether the doors are open/closed, and the "ENGINE START STOP" switch mode.

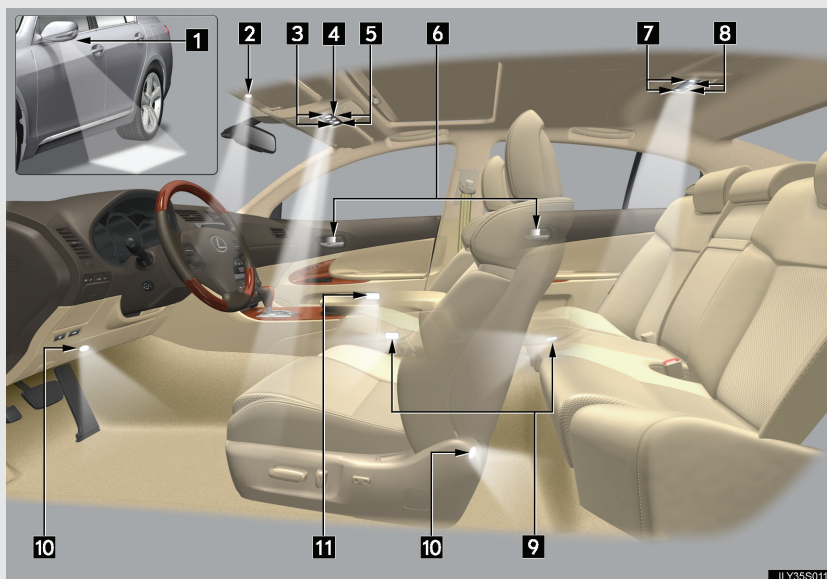

- |                                      |                                     |
|--------------------------------------|-------------------------------------|
| 1 Outer foot light                   | 7 Rear personal lights<br>(→P. 384) |
| 2 Steering spot light                | 8 Rear interior lights              |
| 3 Front personal lights<br>(→P. 384) | 9 Door courtesy lights              |
| 4 Shift lever light                  | 10 Foot light                       |
| 5 Front interior lights(→P. 383)     | 11 Front scuff light                |
| 6 Inside door handle lights          |                                     |

When the instrument panel light control switch is turned to minimum, the foot lights, inside door handle lights and shift lever light will turn off. (→P. 148)

#### ■ To prevent 12 volt battery discharge

If the interior lights, personal lights and steering spot light remain ON when the door is not fully closed or the interior light switch in "DOOR" position, the lights will go off automatically after 20 minutes.

#### ■ Customization that can be configured at Lexus dealer

Setting (e.g. The time elapsed before lights turn off) can be changed.  
(Customizable features → P. 622)

### Interior lights



- 1 "ON"
- 2 "OFF"
- 3 "DOOR"

The interior lights are turned on/off by the illuminated entry system.

3

Interior features

### 3-5. Using the interior lights

#### Personal lights

##### ► Front



ON/OFF

##### ► Rear



ON/OFF

#### ■ Customization that can be configured at Lexus dealer

Settings can be changed. (Customizable features →P. 622)